

# VW TYPE 34 – 1967 ON

- A - Battery
- B - Starter
- C - Generator
- D - Regulator
- E - Turn signal switch with steering/ignition lock
- F - Lighting switch
- F<sup>1</sup> - Windshield wiper switch
- F<sup>2</sup> - Fog light switch
- F<sup>3</sup> - Sun roof switch
- G - Cigar lighter
- H - Twin tone horn relay
- H<sup>1</sup> - Horn lever
- H<sup>2</sup> - Twin tone horn
- J - Hand dimmer relay
- J<sup>1</sup> - Turn signal relay
- J<sup>2</sup> - Headlamp flasher button
- J<sup>3</sup> - Brake light switch
- J<sup>4</sup> - Oil pressure switch
- J<sup>5</sup> - Fuel gauge sender unit
- J<sup>6</sup> - License plate light relay (for Austria only)
- K<sup>1</sup> - High beam warning lamp
- K<sup>2</sup> - Generator warning lamp
- K<sup>3</sup> - Turn signal warning lamp
- K<sup>4</sup> - Oil pressure warning lamp
- K<sup>5</sup> - Parking light warning lamp
- K<sup>6</sup> - Speedometer light
- K<sup>7</sup> - Fuel gauge light
- K<sup>8</sup> - Clock light
- L - Fog light relay
- L<sup>1</sup> - Twin filament bulb for headlight, left
- L<sup>2</sup> - Twin filament bulb for headlight, right
- L<sup>3</sup> - Fog light bulb, left
- L<sup>4</sup> - Fog light bulb, right
- M<sup>1</sup> - Parking light, left
- M<sup>2</sup> - Parking light, right
- M<sup>3</sup> - Side parking light, left
- M<sup>4</sup> - Side parking light, right
- N - Distributor
- O - Ignition coil
- O<sup>1</sup> - Automatic chokes
- O<sup>2</sup> - Electro-magnetic pilot jets
- P<sup>1</sup> - Spark plug connector, No. 1 cylinder
- P<sup>2</sup> - Spark plug connector, No. 2 cylinder
- P<sup>3</sup> - Spark plug connector, No. 3 cylinder
- P<sup>4</sup> - Spark plug connector, No. 4 cylinder
- Q<sup>1</sup> - Spark plug for No. 1 cylinder
- Q<sup>2</sup> - Spark plug for No. 2 cylinder
- Q<sup>3</sup> - Spark plug for No. 3 cylinder
- Q<sup>4</sup> - Spark plug for No. 4 cylinder
- R<sup>1</sup> - Radio
- R<sup>2</sup> - Aerial connection
- S - Fuse box — 10 fuses
- S<sup>1</sup> - Cigar lighter fuse
- S<sup>2</sup> - Fog light and twin tone horn fuse
- T - Cable adapter
- T<sup>1</sup> - Cable connector, single
- T<sup>2</sup> - Cable connector, double
- U<sup>1</sup> - Turn signal, front left
- U<sup>2</sup> - Turn signal, front right
- V<sup>1</sup> - Door switch, left
- V<sup>2</sup> - Door switch, right
- V<sup>3</sup> - Luggage compartment light switch
- W - Windshield wiper motor
- W<sup>1</sup> - Sun roof motor
- X<sup>1</sup> - Turn signal lights, rear
- X<sup>2</sup> - Tail lights
- X<sup>3</sup> - Brake lights
- Y - Interior light
- Y<sup>1</sup> - Luggage compartment light
- Z - License plate light

- ① - Battery to frame ground strap
- ② - Horn lever to steering coupling ground connection
- ③ - Transmission to frame ground connection
- ④ - Windshield wiper motor to body ground strap
- ⑤ - Front axle to frame ground strap

# Wiring Diagram VW Karmann-Ghia-Models (from August 1966, Chassis No. 347 000 001)

